



iBook G4 14" 933 MHz-1.33 GHz Battery Replacement

Written By: iRobot



INTRODUCTION

Changing the battery is easy -- all you need is a coin.



TOOLS:


- [Coin](#) (1)



PARTS:

- [iBook G4 14" Battery](#) (1)

Step 1 — Battery

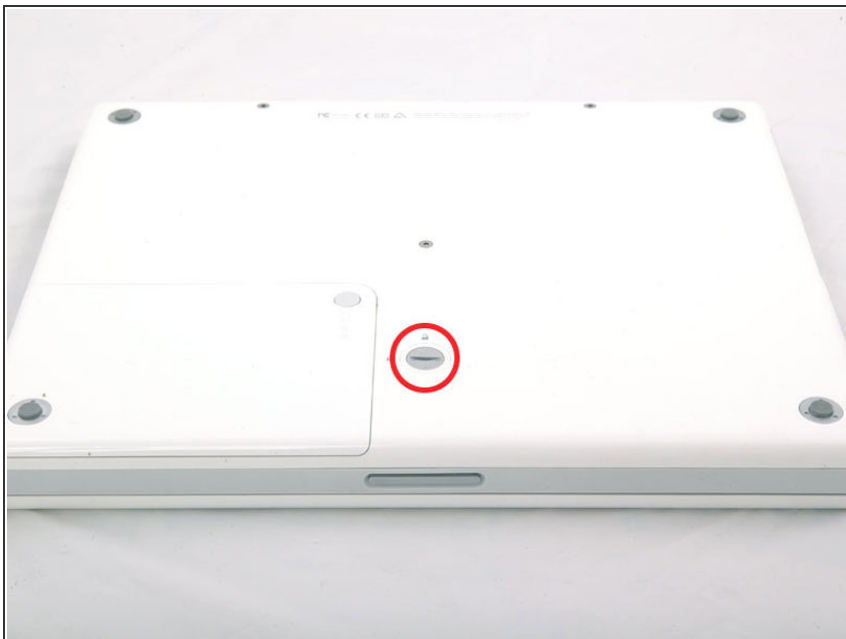

- Use a coin to rotate the battery locking screw 90 degrees clockwise.

Step 2



- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:58:46 PM.